


SLIM SHRINK FIT CHUCKS DIN 69871 SK AD+B

ITEM: C0067

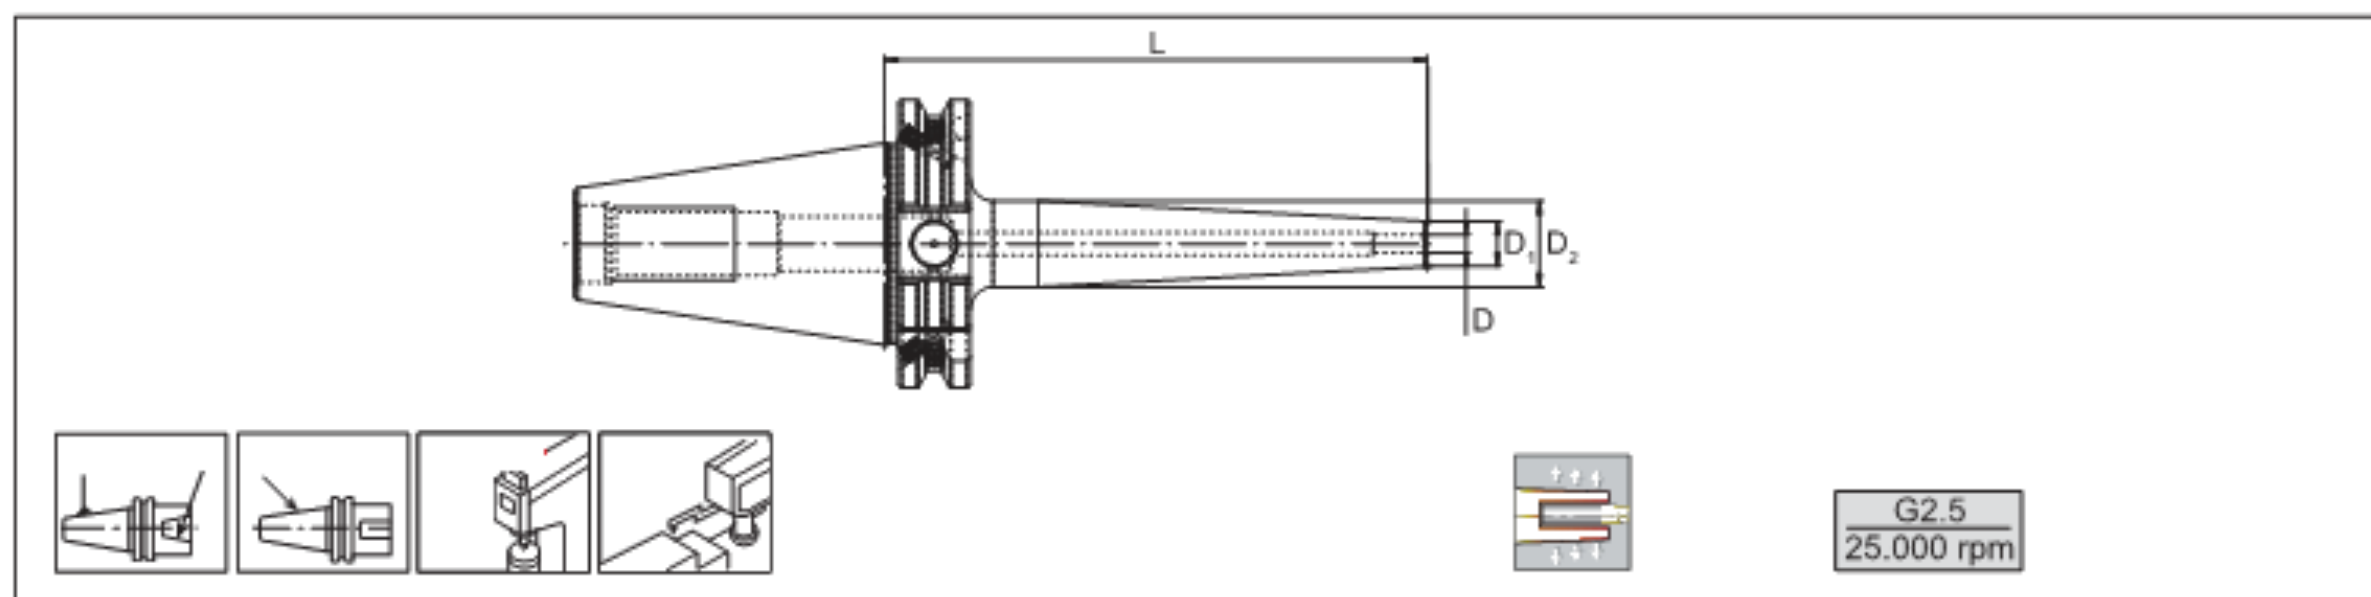


Tech. Code	SK	D mm	L mm	D1 mm	D2 mm
C0067403120*	40	3	120	09	18
C0067404120*		4		10	19
C0067406160		6		12	25
C0067408160		8	160	14	27
C0067410160		10		16	29
C0067412160		12		18	31

For tools only with shank in tolerance h6. *Pre-set screw not included.

- PULL STUDS page C.76

TU-KOY SCREW-ON CHUCKS DIN 69871 SK AD+B

ITEM: C0101

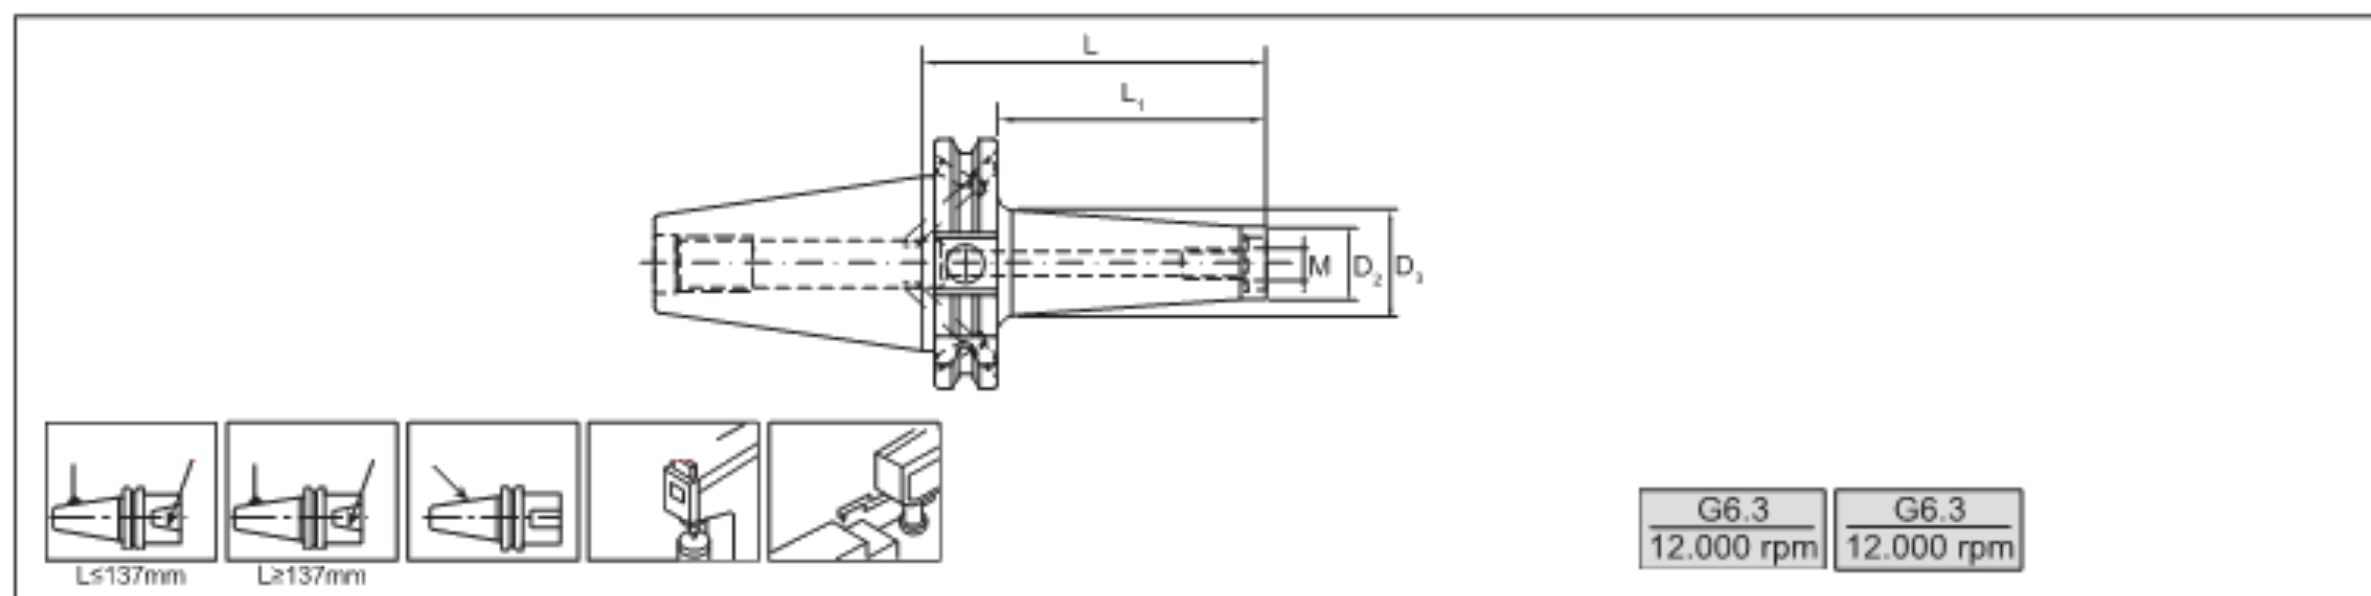

Tech. Code	SK	M	L mm	D2 mm	D3 mm	L1 mm
C01014M08055	40	M8	55	13	15	36
C01014M08069			69		23	50
C01014M08094			94			75
C01014M10055		M10	55	18	20	36
C01014M10069			69		23	50
C01014M10094			94		28	75
C01014M12055		M12	55	21	24	36
C01014M12069			69		31	50
C01014M12094			94			75
C01014M16055		M16	55	29	32	36
C01014M16069			69		34	50
C01014M16094			94			75
C01015M10069	50	M10	69	18	19.5	50
C01015M12069		M12		21	24	
C01015M16069		M16		29	34	

- PULL STUDS page C.76